




A Product of
Every Shelter

ROOF PATCH INSTRUCTIONS

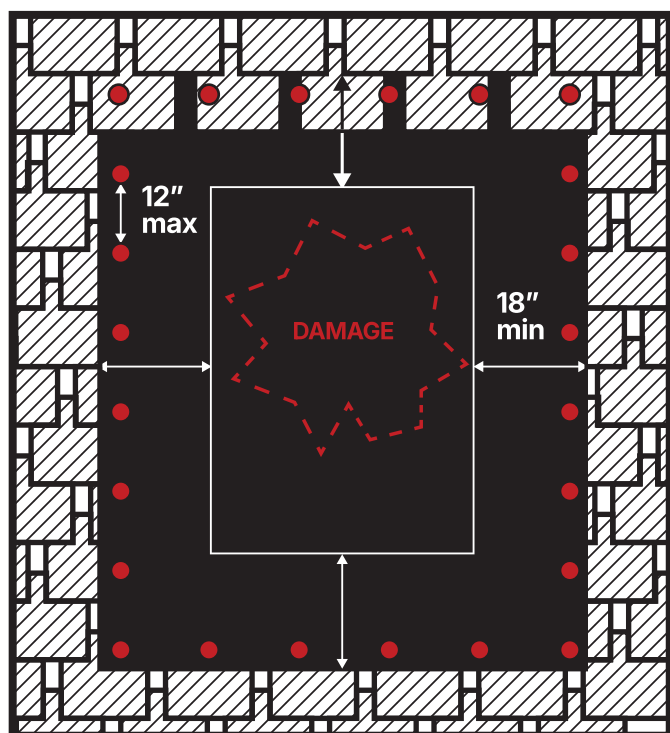

- 1 Starting two rows above the affected area, use a trowel or other flat tool to loosen a row of shingles approximately the width of your patch. Be careful not to damage the top of the shingle.
- 2 Insert tarp, black side up, UNDERNEATH the shingles that have been loosened. Be sure to push the tarp as far up under the loosened row without bending the shingles up to the point of breaking.
- 3 Hammer in provided nails through both the loosened shingle AND the inserted tarp starting at the corner and keeping the tarp taut as you hammer in provided nails along the top every 12".
- 4 Once the top row is completed, while keeping the tarp taut, hammer in remaining nails every 12" around the remaining edges.



For important safety resources and further additional instruction pertaining to this product use the QR code or visit emergencytarp.org/patchkit

THINGS TO NOTE:

- The tarp can be cut to fix a smaller or unusual shape. Ensure the necessary 18" on each side is maintained.
- These instructions are not suitable for damage near the roof ridge.
- If a vent is intruding on the tarped area, special instructions can be found via the QR code.
- Pull tarp taut so wind cannot loosen installation.



100% Upcycled Billboard

Go to website for recycling instructions
www.vinylinfo.org/recycling-directory

WARNING: Working on roofs and ladders is dangerous and can result in serious injury or death; always follow safety guidelines and use appropriate protective gear.